6

FEM Modeling: Introduction

FEM Terminology

degrees of freedom (abbrv: DOF)

state (primary) variables: displacements in mechanics

conjugate variables: forces in mechanics

stiffness matrix

master stiffness equations


$$\mathbf{K} \mathbf{u} = \mathbf{f}$$

$$\mathbf{K} \mathbf{u} = \mathbf{f}_{M} + \mathbf{f}_{I}$$


Physical Significance of Vectors u and f in Miscellaneous FEM Applications

Application Problem	State (DOF) vector u represents	Forcing vector f represents
Structures and solid mechanics	Displacement	Mechanical force
Heat conduction	Temperature	Heat flux
Acoustic fluid	Displacement potential	Particle velocity
Potential flows	Pressure	Particle velocity
General flows	Velocity	Fluxes
Electrostatics	Electric potential	Charge density
Magnetostatics	Magnetic potential	Magnetic intensity

Where FEM Fits (from Chapter 1)

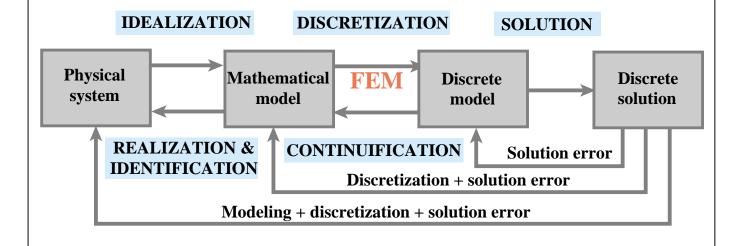

Idealization Process (from Chapter 2)

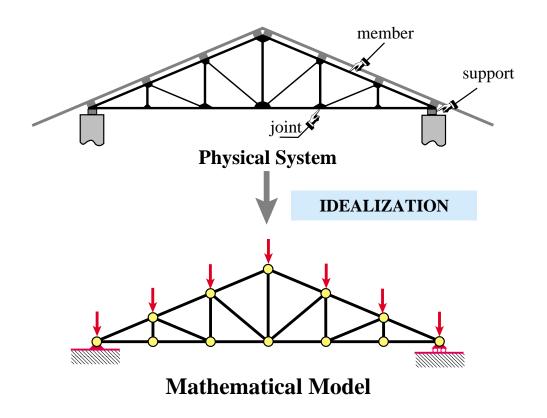


Mathematical Model Definition

Traditional definition

Scaled fabricated version of a physical system (think of a car or train model)

Simulation oriented definition

A model is a symbolic device built to simulate and predict aspects of behavior of a system

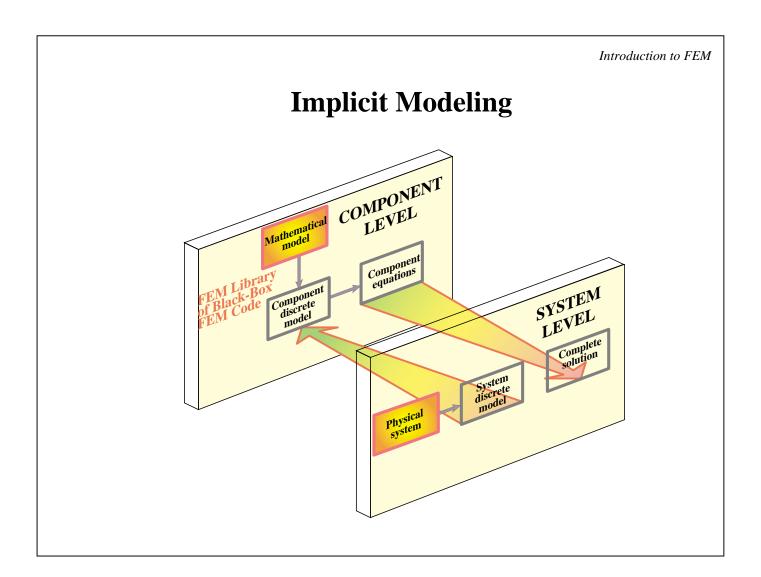

Recall the "Breakdown" DSM Steps

Breakdown

Disconnection
Localization
Member (Element) Formation
-> generic elements

Let Stop Here and Study Generic Elements next

... Because Most of the Remaining DSM Steps

Globalization
Merge
Application of BCs
Solution
Recovery of Node Forces

are **Element Independent**

Attributes of Mechanical Finite Elements


Dimensionality

Nodes serve two purposes: geometric definition home for DOFs (connectors)

Degrees of freedom (DOFs) or "freedoms" Conjugate node forces

Material properties Fabrication properties

Element Geometry Is Defined by Node Locations

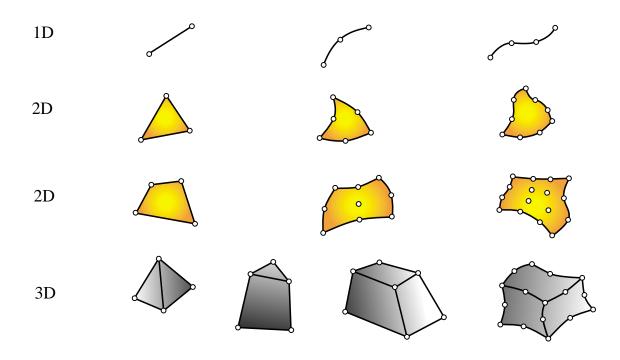

Classification of Mechanical Finite Elements

Primitive Structural

Continuum

Special


Macroelements

Substructures

Superelements

Primitive Structural Elements


(often built from MoM models)

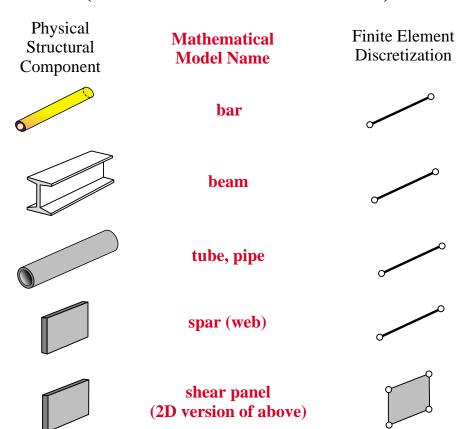

Continuum Elements

Physical Finite element idealization

plates







Physical

Finite element idealization




3D solids








Special Elements

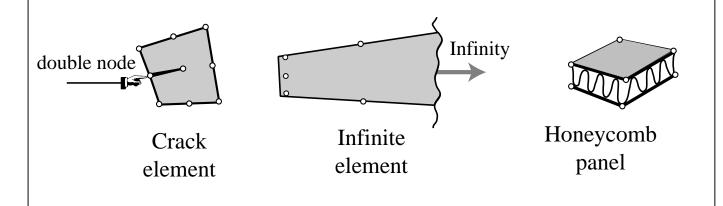


MacroElements

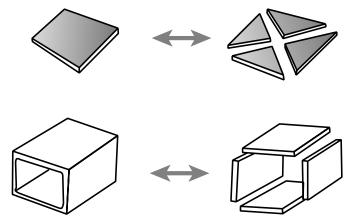

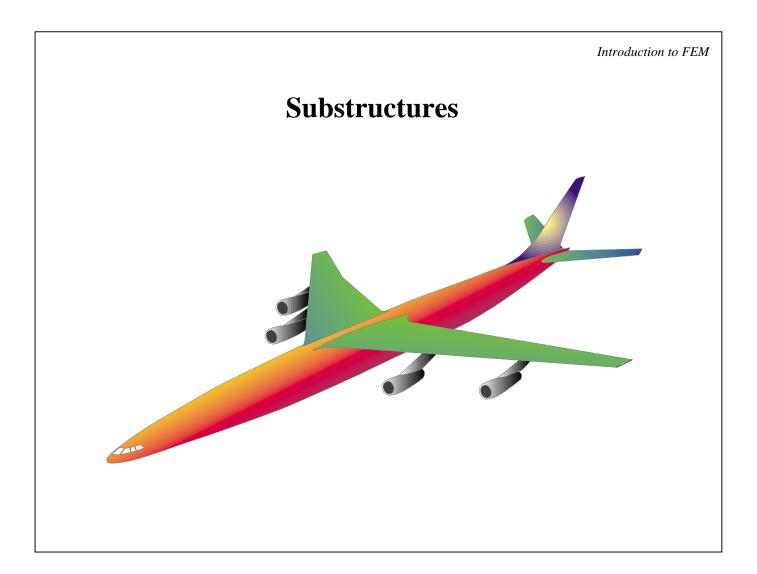

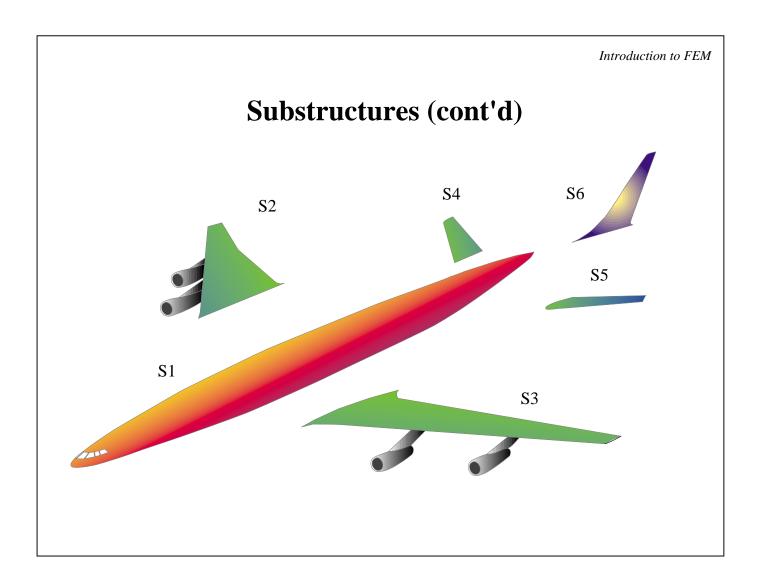

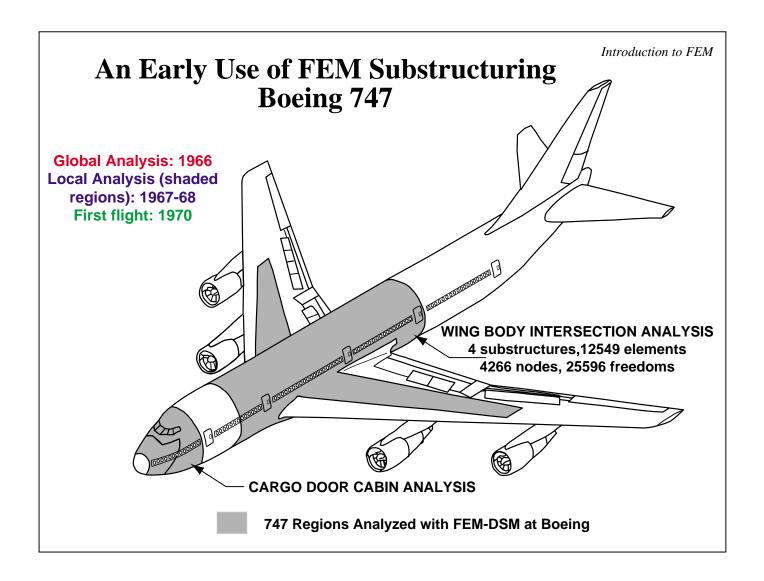

Boundary Conditions (BCs)


The most difficult topic for FEM program users ("the devil hides in the boundary")

Boundary Conditions Essential vs. Natural


Recipe:

- 1. If a BC involves one or more DOF in a direct way, it is <u>essential</u> and goes to the Left Hand Side (LHS) of Ku = f
- 2. Otherwise it is *natural* and goes to the Right Hand Side (RHS) of Ku = f


Examples of Structural Models: Machine Component (Mech. Engrg)

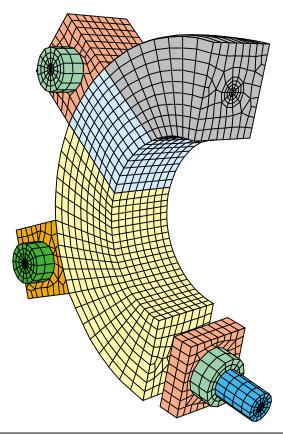


Examples of Structural Models: Dam under Ground Motion (Civil Engrg)

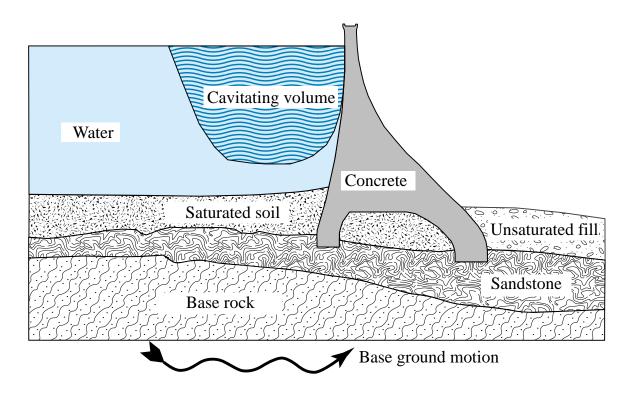



Examples of Structural Models: Rocket Nozzle (Aerospace Engrg)

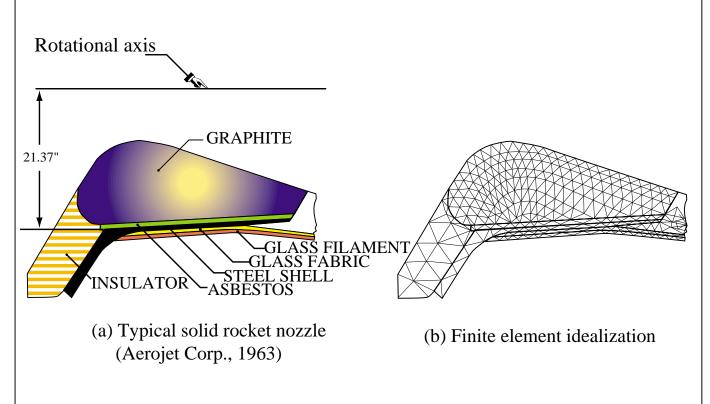

Examples of Structural Models: SuperTanker (Marine Engrg)

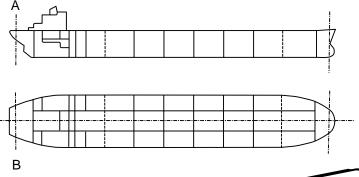

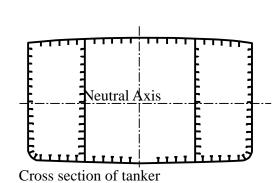

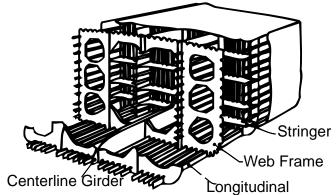

Typical internal structure of tanker

Examples of Structural Models: F16 External View (Aero)

Examples of Structural Models: F16 Internal Structure (Aero)

